

#### **SPECTRA® TREADS PROVIDE:**

A high content of aluminum oxide abrasive grit for long life and lasting beauty. Spectra's safety surface has easy maintenance features and insures greatest protection from liability of falls and injuries.

#### **SPECTRA® FEATURES:**


- · Extruded aluminum base abrasive filler
- Lengths to order up to 10'-0" max in one piece
- · Lengths over maximum to be made in equal sections
- Anti-slip abrasive extending over radius of nose
- · High content of aluminum oxide abrasive
- 18 standard colors Colors extend throughout filler
- Clean architectural lines
- Protective tape available at additional cost
- Noncombustible

### **SPECTRA® SPECIFICATION:**

- Provide Spectra® type WP24A safety nosings as manufactured by Wooster Products Inc. for interior and exterior stairs.
- Tread base shall be type 6063-T5 extruded aluminum.
- Anti-slip filler shall contain not less than 60% virgin grain Aluminum Oxide (Al<sub>2</sub>O<sub>3</sub>) abrasive.
- Binder is to be a fully cured resilient type epoxy; epoxy binder to filler ratio to be 13% minimum for improved cleanability.
- Epoxy/Abrasive filler shall be securely bonded to the extruded aluminum base.
- Treads may terminate 4" from ends of steps for poured concrete stairs; for concrete filled pan stairs, nosings shall be full length of steps less 1/8" clearance.
- Color shall extend uniformly throughout the filler; black color will be furnished if no other color is specified.
- Nosings shall finish flush with the top of the traffic surface.
- Meets California Title 24 code for the visually impaired.



## Type WP24A

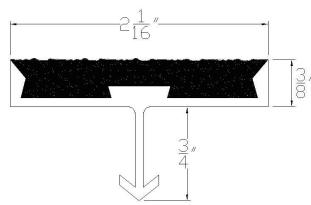

2 1/16" wide, 3/8" thick, Sure Hold anchor DRAWING NOT TO SCALE Maximum length is 10'-0".

The type WP24A is to be recessed into fresh concrete.

# GUIDELINES FOR THE INSTALLATION OF METAL SAFETY TREADS OR NOSINGS INTO NEW CONCRETE OR STEEL PAN FILLED STAIRS:

- The use of very large aggregate in the concrete mix may make placement of the safety nosing difficult.
- Safety nosing placement may be difficult in concrete with very low slump.
- Place concrete into the stair forms or steel pans as quickly as possible; schedule pour so as to install the metal safety nosings quickly before the initial set of concrete occurs.
- Puddle the concrete, tamp the safety nosings to insure proper concrete formation around the anchors.
- Remove protective tape (if used) as soon as practical.
- Order nosings or treads well in advance of the pour or installation date.
- Close Stairway after pour; permit no use for 24 hours.

WOOSTER PRODUCTS INC, 1000 SPRUCE ST., WOOSTER, OH 44691

Toll Free: 800-321-4936 Phone: 330-264-2844 Fax: 330-262-4151

Website: http://www.woosterproducts.com E-mail: sales@wooster-products.com